


MICROMEGA MYAMP

Trigger Input / External RC5 codes

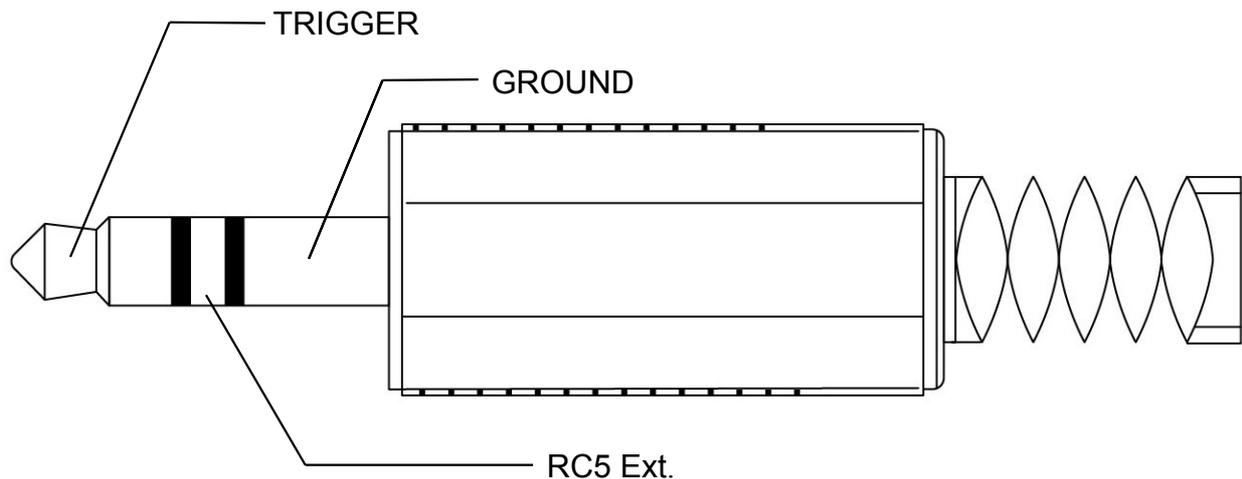

On the back panel of MyAMP you will find a 2.5mm diameter jack input indicated by : TRIG / IR-IN. Following the diagram above you can remotely turn MyAMP in and out of Standby by sending between GROUND and TRIGGER a positive DC voltage with a value between 5V and 12V.

You can also remotely control MyAMP using the IR-IN input thus sending, between GROUND and RC5 Ext, RC5 remote control codes following the list below. The positive voltage of these codes should be between 5V and 12V.

RC Handset Key	System	Command
AN1	16	01
AN2	16	02
AN3	16	03
USB	16	04
OP	16	05
CO	16	06
Bluetooth	16	07
Vol-	16	17
Mute	16	13
Vol+	16	16
Standby	16	12